

## HotView Pro and Password Parameters

### Overview

There are different areas in HotView Pro that require a password. This FAQ covers the following areas:

1. HotView Pro User
2. HotPort/ Mesh
3. Wireless Security

Depending on the area, the password requirements will vary.

### HotView Pro User Passwords

- Max Length: 15 characters
- Numbers: 0-9
- Alphabets: a-z and A-Z
- Special Characters: No restrictions (all special characters accepted)

### HotPort/ Mesh Passwords

- Max Length: 15 characters
- Numbers: 0-9
- Alphabets: a-z and A-Z
- Special Characters: \_ @ # \$ % - . \* (restricted to only these characters)

### Wireless Security Passwords

- Type: AES 256-bit ASCII key
- Required Length: 32 characters
- Numbers: 0-9
- Alphabets: a-z and A-Z
- Special Characters: Restricted (no special characters allowed)
  
- Type: AES 256-bit HEX key
- Required Length: 64 characters
- Numbers: 0-9
- Alphabets: a-f and A-F
- Special Characters: Restricted (no special characters allowed)

FTPASSWORDSUPPORT09222016  
Rev. 02