


Requirements for Managing a 5020-LNK


HotView Pro software is required and can be downloaded from the [Support Resources](#) page. A HotView Pro Management license is not required. If you do, however, have a Management license on a HotView Pro Server, then you can continue to use this same Server (as long as you are running HotView Pro version 10.15.0.0, 10.16.0.0, or 10.17.0.0) with your 5020-LNK bridge nodes.

If your HotView Pro Server does not have a Management license, refer to the following:

1. Then select **Manage Licensed HotPort Nodes** from the **Option** tab of your Integrated HotView Launcher

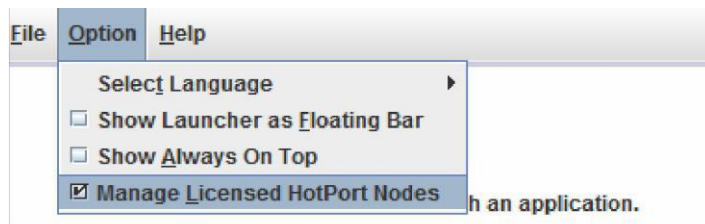

2. Select **File** and

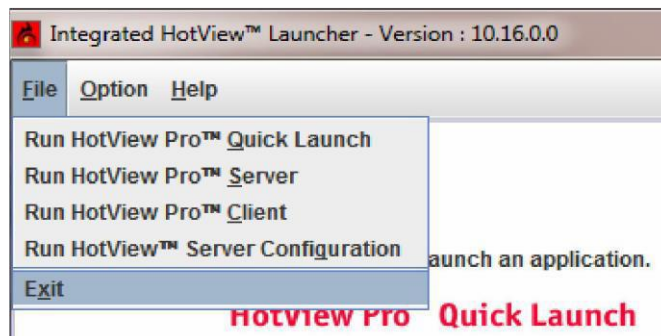

In this setting, all functionality of HotView Pro is still available, except the Licensing tab under Server Configuration is no longer visible or accessible.

FT5020LNKMNGMNTREQ03102015
Rev. 01